

Care and Maintenance Guide

Recommended Cleaning Tools:


- INNI Brush Cleaning Kit. Brushes clean all interior surfaces of the line drain in a few quick swipes. Brushes are made to order and can be purchased at: <https://ebbe-america.com/product/e6103-inni-cleaning-brush-kit/>




Recommended Cleaning Products:

- Typical bathroom cleaning agents are safe to use.
- Avoid acidic cleaners.

CLEANING:

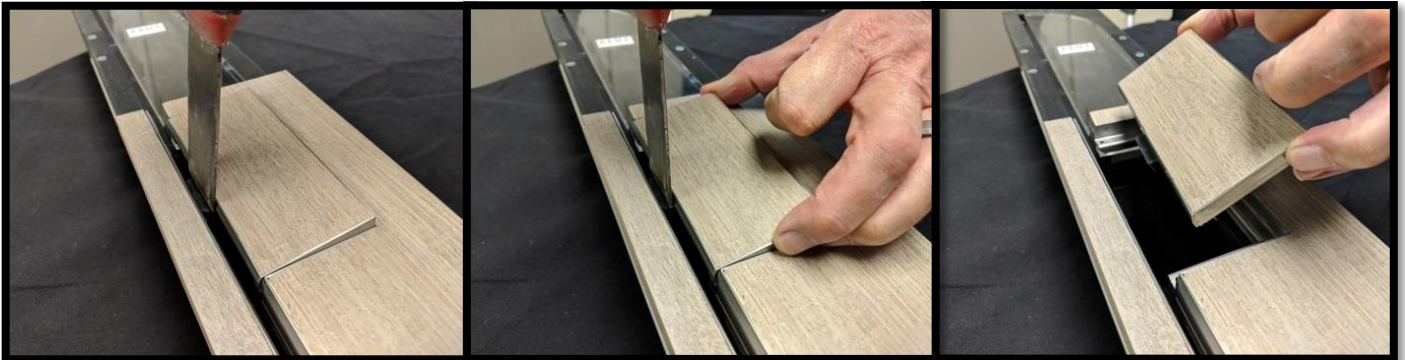

1. Remove the access cover: Use a flat screwdriver or putty knife and firmly press against the black tab at the slot. The access cover will rotate up allowing it to be completely removed. **

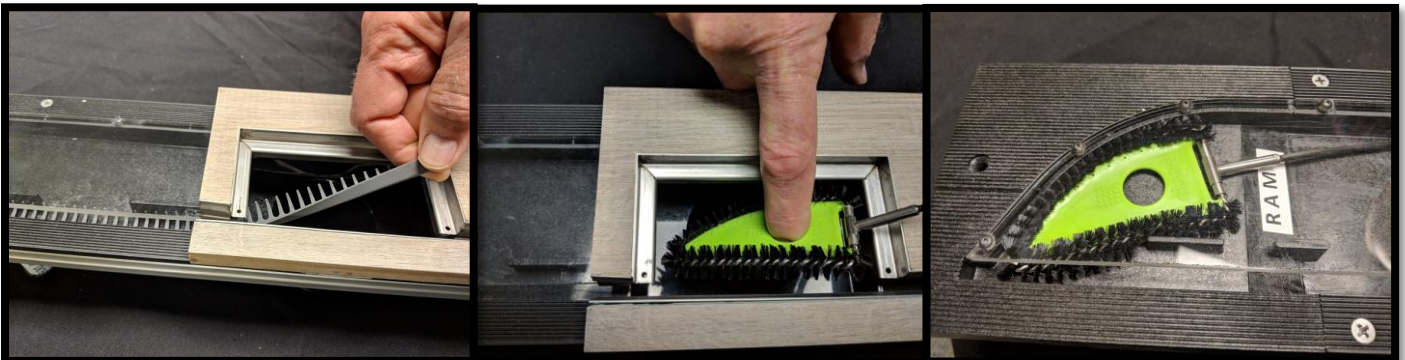


2. Remove the hair traps through the access opening

3. Apply cleaner into the slot. Insert the D-shaped cleaning brush into the access opening with the straight side of the "D" facing the slot. Move the brush back and forth to scour the interior surfaces.


Note: Push the cleaning brush to the end of the channel moving any debris to the slot.




4. Use the cylindrical brush to clean along the inlet slot.

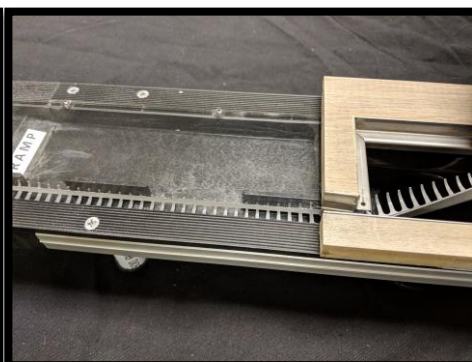

5. Re-install the hair traps.

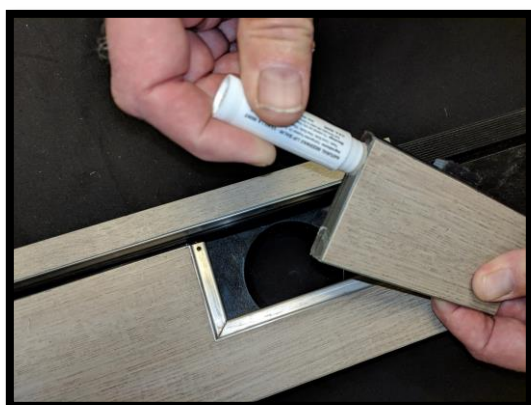

6. Before re-installing the access cover apply wax or petroleum jelly around perimeter to aid in future removal.

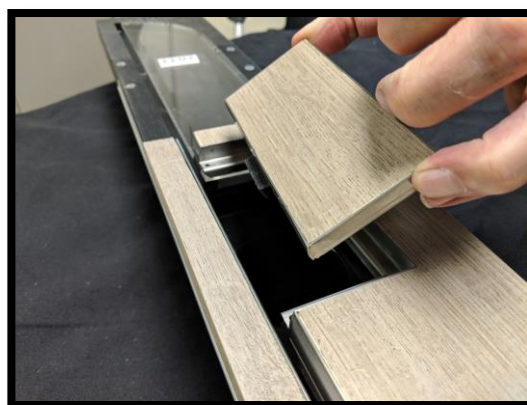

7. Re-Install the access cover slot side first. Push the cover down into the trim until both are flush.

****If the access cover cannot be removed, or any questions, please call us at 801-820-7200.**